

Note: These instructions focus on packing the Voom™ System. The setup is exactly the same in reverse order.



Pull back the **left** and **right** sides of the fabric. They are attached using Velcro®




Release the red locks by pressing on the tab using your thumb.



Separate all of the magnetic connection points.



Once all of the magnetic connections are released. The frame will collapse down to its packing size

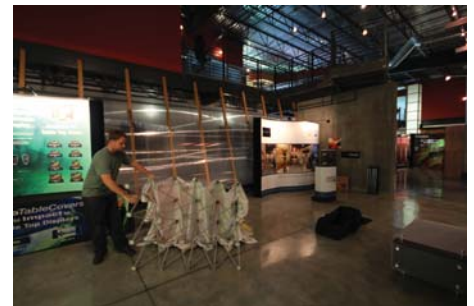

Place the collapsed Voom™ into the provided bag and you are ready to go. The graphic remains on the product during the packing process.

